# Accessories

## Cleaning Supplies

| | |
|---|---|
| 5090-3379 | Toner cleaning cloth - Specially treated cloth for absorbing toner (1 per package) - Ideal for clening up toner spills |

## Kit

| | |
|---|---|
| H3971-60002 | Maintenance Kit - 220V - Most common wear parts - Includes, transfer roller, pickup roller, separation pad, idler roller assembly, and fusing assembly - Procedure requires service manual |

# Electronic Accessories

## Cable (Interface)

| | |
|---|---|
| 5063-1256 | IEEE-1284 Bi-Tronics parallel cable - DB-25 (M) connector (type A) to 36 pin Centronics (M) connector (type B) - 2.0m (6.6ft) long |
| 5063-1257 | IEEE-1284 Bi-Tronics parallel cable - DB-25 (M) connector (type A) to 36 pin Centronics (M) connector (type B) - 3.0m (9.8ft) long |
| C2950A | IEEE-1284 Bi-Tronics parallel cable - DB-25 (M) connector (type A) to 36 pin Centronics (M) connector (type B) - 2.0m (6.6ft) long |
| *5063-1256* | *New Part for C2950A* |
| C2951A | IEEE-1284 Bi-Tronics parallel cable - DB-25 (M) connector (type A) to 36 pin Centronics (M) connector (type B) - 3.0m (9.8ft) long |
| C2990A | IEEE-1284 Bi-Tronics parallel cable - DB-25 (M) (type A) to 36 pin (M) Centronics (type B) - 1.8m (6ft) long<br>NO LONGER SUPPLIED |
| C2991A | IEEE-1284 Bi-Tronics parallel cable - DB-25 (M) (type A) to 36 pin (M) Centronics (type B) - 3.0m (10ft) long<br>NO LONGER SUPPLIED |

## Fax

| | |
|---|---|
| C2971A | HP PrinterPal accessory - Adds (External) fax capabilities to the LaserJet printer<br>NO LONGER SUPPLIED |

## Memory (Product)

| | |
|---|---|
| C3148A | 4MB DRAM Jeida memory module - For HP LaserJet 4LC, 5L, 6L |
| C3938A | 2MB DRAM memory module - For HP LaserJet 4LC, 5L<br>NO LONGER SUPPLIED |
| C3939A | 2MB DRAM Jeida memory module - For HP LaserJet 4LC, 5L<br>NO LONGER SUPPLIED |

## Memory Module

| | |
|---|---|
| C3148-67901 | 4MB DRAM JEIDA memory module - For LaserJets - (C3148A) |
| C3938-67901 | 2MB DRAM JEIDA memory module - For LaserJets - (C3938A) |
| C3939-67901 | 1MB DRAM JEIDA memory module - For LaserJets |

# External Case Parts

## Cover

| | | |
|---|---|---|
| 16 | RB1-7321-000CN | Memory expansion cover (Door) |
| 17 | RB1-7333-000CN | Back cover - Has cut-outs for interface and power connectors |
| 18 | RG5-1995-000CN | Main top cover - Does NOT include the paper input assemblies |

## Door

| | | |
|---|---|---|
| 19 | RF5-1501-030CN | Main front door that is attached to the multipurpose input tray |

## Extender

| | | |
|---|---|---|
| 20 | RB1-7211-000CN | Large paper input extender - Does NOT include smaller extender<br>NO LONGER SUPPLIED |
| 21 | RB1-7212-000CN | Small paper input extender |
| 22 | RB1-7326-000CN | Large paper output extender - Does NOT include smaller extender<br>NO LONGER SUPPLIED |
| 23 | RB1-7331-000CN | Small paper output extender |

© 2004 Hewlett-Packard Development Company, L.P. 

## External Case Parts

### Faceplate

| | | |
|---|---|---|
| 24 | RB1-7305-000CN | I/O faceplate - For parallel connector |

### Input Assembly

| | | |
|---|---|---|
| 25 | RG5-1944-050CN | Paper input assembly - Rear half of input paper feed slot |
| 26 | RG5-1945-040CN | Paper input assembly - Front half of paper input feed slot - Input assembly 2 |

### Nameplate/Logo

| | | |
|---|---|---|
| 27 | RB1-7335-000CN | Nameplate - LaserJet 5L |

### Switch

| | | |
|---|---|---|
| 28 | RB1-7278-000CN | Face-up/face-down selection switch |

## Internal Components

### Spring

| | | |
|---|---|---|
| | RS5-2508-000CN | Compression spring - Provides tension for pressure plate |

## Labels and Transparencies

### Film (Transparency)

| | | |
|---|---|---|
| | 92296U | LaserJet printer transparency film - A4 size (21.0cm x 29.7cm) - 50 sheets per box |
| | 92296T | LaserJet printer transparency film - A size (8.5 x 11-inches) - 50 sheets per box |

### Labels

| | | |
|---|---|---|
| | 92296A | LaserJet printer addressing labels - 2.54cm (1.00in) x 6.67cm (2.63in) labels - 30 per sheet - 100 sheets per box<br>NO LONGER SUPPLIED |
| | 92296B | LaserJet printer addressing labels - 3.38cm (1.33in) x 10.2cm (4.00in) labels - 14 per sheet - 100 sheets per box<br>NO LONGER SUPPLIED |
| | 92296C | LaserJet printer addressing labels - 2.54cm (1.00in) x 10.2cm (4.00in) labels - 20 per sheet - 100 sheets per box<br>NO LONGER SUPPLIED |
| | 92296D | LaserJet printer addressing/shipping labels - 5.08cm (2.00in) x 10.2cm (4.00in) labels - 10 per sheet - 100 sheets per box<br>NO LONGER SUPPLIED |
| | 92296E | LaserJet printer shipping labels - 8.47cm (3.33in) x 10.2cm (4.00in) labels - Six per sheet - 100 sheets per box<br>NO LONGER SUPPLIED |
| | 92296F | LaserJet printer return address labels - 1.27cm (0.50in) x 4.45cm (1.75in) labels - 80 per sheet - 25 sheets per box<br>NO LONGER SUPPLIED |
| | 92296G | LaserJet printer file folder labels - 1.69cm (0.67in) x 8.73cm (3.44in) labels - 30 per sheet - 25 sheets per box<br>NO LONGER SUPPLIED |
| | 92296H | LaserJet printer labels for 3.5-inch diskettes - 7.00cm (2.75in) x 7.00cm (2.75in) labels - Nine per sheet - 70 sheets per box<br>NO LONGER SUPPLIED |
| | 92296J | LaserJet printer labels for 5.25-inch diskettes - 3.81cm (1.50in) x 10.2cm (4.00in) labels - 12 per sheet - 70 sheets per box<br>NO LONGER SUPPLIED |
| | 92296K | LaserJet printer full sheet label - A size (8.5 x 11-inches) label - One per sheet - 100 sheets per box<br>NO LONGER SUPPLIED |

## Logic/Control Electronics

### Cable

| | | |
|---|---|---|
| 42 | RG5-2029-000CN | Cable - From connector J202 on DC controller board to paper registration and paper-out photosensors (PS203 and PS202) |
| 43 | RG5-2031-000CN | Cable - From connector J209 on DC controller board to door closed/toner cartridge installed sensor (PS204)<br>NO LONGER SUPPLIED |
| 44 | RG5-2032-000CN | Cable - From connector J206 on DC controller board to fusing assembly |
| 45 | RG5-2033-000CN | Motor cable - From connector J401 on DC controller board to main motor |
| 46 | RG5-2034-000CN | Scanner cable - From connector J207 on DC controller board to scanner motor |

© 2004 Hewlett-Packard Development Company, L.P. 

## Logic/Control Electronics

### Cable

| | | |
|---|---|---|
| 47 | RG5-2035-000CN | Laser cable - From connector J208 on DC controller board to laser unit (Laser driver/beam detect circuitry) |
| 48 | RG5-2036-000CN | Cable - From control panel to formatter board |
| 49 | RG5-2037-000CN | Door switch cable - From connector J305 on DC controller board to switch 101 |

### Control Panel

| | | |
|---|---|---|
| 50 | RG5-2028-000CN | Control panel - Small board on left side of printer |

### PC Board

| | | |
|---|---|---|
| 51 | C3942-69002 | Formatter board - Has Bi-Tronics interface connector on board<br>NO LONGER SUPPLIED |

## Optional Interfaces

### Interface (Module)

| | | |
|---|---|---|
| | J4101-61011 | External JetDirect 300X print server module (10Base-T and 100Base-T) - Connects between printer parallel port and LAN network - Does NOT include power module - (J4101A, J4101B) |

### Interface (Product)

| | | |
|---|---|---|
| | J2590A | External JetDirect LAN interface module with RJ-45 connector for EtherTwist (10Base-T) or 100VG/802.12 input and 3 parallel (DB-25) output connectors<br>NO LONGER SUPPLIED |
| | J2591A | External JetDirect LAN interface module and power module - Has EtherTwist (10Base-T) and ThinLAN (10Base-2) connectors<br>NO LONGER SUPPLIED |
| | J3258B | External JetDirect 170X LAN interface module - Interfaces a parallel printer to an ethernet 10Base-T (RJ-45) LAN |
| | J3264A | External JetDirect 500X token ring interface module - Interfaces up to 3 parallel printers to a token ring (DB-9 or RJ-45) LAN |
| | J3265A | External JetDirect 500X LAN interface module - Interfaces up to 3 parallel printers to an ethernet 10Base-T (RJ-45), 10Base2 (BNC), or 100Base-TX (RJ-45) LAN |

### Module

| | | |
|---|---|---|
| | J2382-69003 | External JetDirect LAN interface module with ethertwist (10Base-T) and ThinLAN (10BASE-2) connectors |
| | J2383-61005 | External token ring interface module - Has DB-9 connector |
| | J2590-69001 | External JetDirect LAN interface module with RJ-45 connector for ethertwist (10Base-T) or 100VG/802.12 input and 3 parallel (DB-25) output connectors<br>REQUIRES RETURN OF DEFECTIVE PART |
| | *J2590-61011* | *New Part for J2590-69001* |
| | J2591-69001 | External JetDirect LAN interface module with ethertwist (10Base-T) and ThinLAN (10BASE-2) connectors |
| | J2592-69001 | External JetDirect LAN interface module with ethertwist (10Base-T) connector<br>REQUIRES RETURN OF DEFECTIVE PART |
| | *J2592-61001* | *New Part for J2592-69001* |
| | J2593-69001 | External JetDirect LAN interface module with Ethertwist (10Base-T) and ThinLAN (10BASE-2) input connectors and 3 parallel (DB-25) output connectors - (part of J2593A) |
| | J2594-69001 | External JetDirect token ring interface module with DB-9 and RJ-45 input connectors and 3 parallel (DB-25) output connectors - (part of J2594A)<br>REQUIRES RETURN OF DEFECTIVE PART |
| | *J2594-61011* | *New Part for J2594-69001* |
| | J3258-61011 | External JetDirect LAN interface module with EtherTwist (10Base-T) connector - (J3258A, J3258B) |
| | J4102-69011 | External JetDirect LAN interface module with EtherTwist (10Base-T) connector - (J4102A, J4102B)<br>REQUIRES RETURN OF DEFECTIVE PART |
| | *J4102-61011* | *New Part for J4102-69011* |

### Module (Product)

| | | |
|---|---|---|
| | J4101B | External JetDirect LAN interface module with EtherTwist (10Base-T/Base-TX) connector |
| | J4102B | External JetDirect LAN interface module with EtherTwist (10Base-T) connector |

© 2004 Hewlett-Packard Development Company, L.P. 

## Optional Interfaces

### Power Cord

| | |
|---|---|
| 8120-1351 | Power cord (Mint Gray) - 17 AWG, 2.3m (7.5ft) long - Has straight (F) receptacle (For 240V in the UK, Hong Kong, Singapore, Malaysia, and Brunei) |
| 8120-1369 | Power cord (Mint Gray) - 17 AWG, 2.0m (6.6ft) long - Has straight (F) receptacle (For 240V in Australia, New Zealand, and China) |
| 8120-1378 | Power cord (Jade Gray) - 18 AWG, 2.3m (7.5ft) long - Has straight (F) receptacle (For 120V in USA, Canada, Latin America, Korea, Taiwan, Thailand, Spain, Brazil, and Vietnam) |
| 8120-1689 | Power cord (Mint Gray) - 17 AWG, 2.0m (6.6ft) long - Has straight (F) receptacle (For 220V in Europe, Bangladesh, Indonesia, Pakistan, Burma, Sri Lanka, and Vietnam) |
| 8120-2104 | Power cord (Mint Gray) - 2.0m (6.6ft) long - Has straight (F) receptacle (For 220V in Switzerland) |
| 8120-2956 | Power cord (Mint Gray) - 2.0m (6.6ft) long - Has straight (F) receptacle (For 220V in Denmark) |
| 8120-4753 | Power cord (Flint Gray) - 18 AWG, 2.3m (7.5ft) long - Has straight (F) receptacle (For 100V in Japan) |
| 8120-6302 | 'Daisy chain' power cord (Dove Gray) - 18 AWG, 1.2m (4.0ft) long - Has C14 (M) plug for power input and C13 (F) plug for power output |

### Power Module

| | |
|---|---|
| 0950-2372 | Power supply module - 100-240VAC input, 47-63Hz, requires separate AC power cord - 5VDC output, 1A, 5 watts - For J2382/83A/B |
| 0950-3169 | Wall mount power supply module - 110-127V AC 57-63Hz input - 13V DC output at 300mA (USA, Canada) - For use with the J2592A external JetDirect LAN interface module |
| 0950-3170 | Power supply module - 209-253VAC input, 47-53Hz - 13VDC output, 300mA (Europe, Israel) - For use with the J2592A external JetDirect LAN interface module |
| 0950-3171 | Power supply module - 220-240VAC input, 47-53Hz - 13VDC output, 300mA (U.K., Hong Kong) - For use with the J2592A external JetDirect LAN interface module |
| 0950-3172 | Power supply module - 240VAC input, 47-53Hz - 13VDC output, 300mA (Australia) - For use with the J2592A external JetDirect LAN interface module |
| 0950-3348 | Wall mount power supply module (MEI-AH ED12006) - 110-127VAC input, 57-63Hz - 13VDC output, 800mA, 10.4 watts (for use in the United States and Canada) - For models J2590/91/93/94A, J2964A, J3258A/B, J3263/64/65A, J3282B, J4101A/B, J4102A/B |
| 0950-3349 | Wall mount power supply module (MEI-AH ED12007) - 230VAC input, 47-53Hz - 13VDC output, 800mA, 10.4 watts (for use in Europe and Israel) - For JetDirect/infrared interface models J2590/91/93/94A, J2964A, J3258A/B, J3263/64/65A, J3282B, J4101A/B, J4102A/B |
| 0950-3350 | Wall mount power supply module (MEI-AH ED12008) - 220-240VAC input, 47-53Hz - 13VDC output, 800mA, 10.4 watts (for use in the United Kingdom) - For JetDirect/infrared interfaces J2590/91/93/94A, J2964A, J3258A/B, J3263/64/65A, J3282B, J4101A/B, J4102A/B |
| 0950-3351 | Wall mount power supply module (MEI-AH ED12009) - 220VAC input, 47-63Hz - 13VDC output, 800mA, 10.4 watts (for use in South Korea) - For JetDirect/infrared interface models J2590/91/93/94A, J2964A, J3258A/B, J3263/64/65A, J3282B, J4101A/B, J4102A/B |
| 0950-3352 | Wall mount power supply module (MEI-AH ED12010) - 100VAC input, 47-63Hz - 13VDC output, 800mA, 10.4 watts (for use in Japan) - For JetDirect/infrared interface models J2590/91/93/94A, J2964A, J3258A/B, J3263/64/65A, J3282B, J4101A/B, J4102A/B |
| 0950-3354 | Wall mount power supply module (MEI-AH ED12010) - 220-250VAC input, 47-53Hz - 13VDC output, 800mA, 10.4 watts (for use in South Africa) - For JetDirect/infrared interface models J2590/91/93/94A, J2964A, J3258A/B, J3263/64/65A, J3282B, J4101A/B, J4102A/B |
| 9100-5176 | Wall mount power supply module (Leader Electronics 48130625HK) - 200VAC input, 48-52Hz - 13VDC output, 625mA (Hong Kong) - For JetDirect Modules and Infrared Interface Models J2590/91/93/94A, J2964A, J3258A/B, J3263/64/65A, J3282B, J4101A/B, J4102A/B |
| *0950-3350* | *New Part for 9100-5176* |

## Other Accessories

### Cartridge

| | |
|---|---|
| C3906A | Black (Micro-Fine) toner (EP) cartridge - Will print approximately 2,500 pages based on a 5 percent print density |

© 2004 Hewlett-Packard Development Company, L.P. 

## Other Accessories

### Kit

| | |
|---|---|
| H3971-60001 | Maintenance Kit - 120V - Most common wear parts - Includes, transfer roller, pickup roller, separation pad, idler roller assembly, and fusing assembly - Procedure requires service manual |

### Lubricant

| | |
|---|---|
| CK-8006-000CN | Grease |

### Manual

| | |
|---|---|
| 5851-1468 | LaserJet printer family paper specification guide |
| C3941-90901 | LaserJet 5L printer user's manual (English) |
| C3941-90902 | LaserJet 5L printer user's manual (German)<br>NO LONGER SUPPLIED |
| C3941-90903 | LaserJet 5L printer user's manual (Spanish)<br>NO LONGER SUPPLIED |
| C3941-90904 | LaserJet 5L printer user's manual (Denmark)<br>NO LONGER SUPPLIED |
| C3941-90905 | LaserJet 5L printer user's manual (Portuguese)<br>NO LONGER SUPPLIED |
| C3941-90906 | LaserJet 5L printer user's manual (Italian)<br>NO LONGER SUPPLIED |
| C3941-90907 | LaserJet 5L printer user's manual (Swedish)<br>NO LONGER SUPPLIED |
| C3941-90908 | LaserJet 5L printer user's manual (Dutch)<br>NO LONGER SUPPLIED |
| C3941-90909 | LaserJet 5L printer user's manual (Polish)<br>NO LONGER SUPPLIED |
| C3941-90910 | LaserJet 5L printer user's manual (French)<br>NO LONGER SUPPLIED |
| C3941-90911 | LaserJet 5L printer user's manual (Norwegian)<br>NO LONGER SUPPLIED |
| C3941-90912 | LaserJet 5L printer user's manual (Finnish)<br>NO LONGER SUPPLIED |
| C3941-90913 | LaserJet 5L printer user's manual (Turkish)<br>NO LONGER SUPPLIED |
| C3941-90917 | LaserJet 5L printer user's manual (Czechoslovakian)<br>NO LONGER SUPPLIED |
| C3941-90918 | LaserJet 5L printer user's manual (Hungarian)<br>NO LONGER SUPPLIED |
| C3941-90919 | LaserJet 5L printer user's manual (Russian)<br>NO LONGER SUPPLIED |
| C3941-90923 | LaserJet 5L printer user's manual (European English)<br>NO LONGER SUPPLIED |
| C3990-90991 | LaserJet 5L and 6L service manual |
| 5021-8943 | LaserJet quick reference guide - Volume 1 of 2 volume set |
| 5090-3390 | LaserJet quick reference guide - Volume 2 of 2 volume set |

### Manual Kit

| | |
|---|---|
| 5021-0377 | HP-GL/2, PCL5 and PJL technical reference manual kit |

### Software

| | |
|---|---|
| C6072-60301 | HP-GL/2 driver software for AutoCAD - For DOS and Windows 3.1/95/NT 4.0 - On 3.5-inch 1.44MB floppy disks (English) |
| C6072-60304 | HP-GL/2 driver software for AutoCAD - For DOS and Windows 3.1/95/NT 4.0 - On 3.5-inch 1.44MB floppy disks (German) |
| C6072-60305 | HP-GL/2 driver software for AutoCAD - For DOS and Windows 3.1/95/NT 4.0 - On 3.5-inch 1.44MB floppy disks (French) |

© 2004 Hewlett-Packard Development Company, L.P. 

## Other Accessories

### Software

| | | |
|---|---|---|
| | C6072-60306 | HP-GL/2 driver software for AutoCAD - For DOS and Windows 3.1/95/NT 4.0 - On 3.5-inch 1.44MB floppy disks (Spanish) |
| | C6072-60307 | HP-GL/2 driver software for AutoCAD - For DOS and Windows 3.1/95/NT 4.0 - On 3.5-inch 1.44MB floppy disks (Italian) |

### Training Kit

| | | |
|---|---|---|
| | C3990-67915 | Self paced training kit for LaserJet 5L, 5L-FS, 6L printers - NTSC format video (VHS) |
| | C3990-67916 | Self paced training kit for LaserJet 5L, 5L-FS, 6L printers - PAL format video (VHS) |

### Training Test

| | | |
|---|---|---|
| | C3990-60184 | Additional self paced training test - Contains 1 test for LaserJet 5L, 6L - Contains NTSC training video |

## Other Internal Parts

### Gear Assembly

| | | |
|---|---|---|
| 122 | RY7-5007-000CN | Fuser release assembly - Gear/tab assembly on left side of internal main chassis - Includes housing, 2 gears, fuser release tab |

### Guide

| | | |
|---|---|---|
| 123 | RB1-7109-000CN | Guide - For memory expansion cover (Door) |

### Holder

| | | |
|---|---|---|
| 124 | RB1-7107-000CN | Gear holder - For gear kit #1 |

### Interlock

| | | |
|---|---|---|
| 125 | RG5-1984-000CN | Interlock assembly - Detects if EP (Toner) door is open |

### Plate

| | | |
|---|---|---|
| 126 | RB1-7106-000CN | Gear support plate - For gear kit #2<br>NO LONGER SUPPLIED |

### Tab

| | | |
|---|---|---|
| 127 | RB1-7105-000CN | Fuser release lever - Part of fuser release assembly |

## Paper Path Parts

### Arm

| | | |
|---|---|---|
| 128 | RB1-7293-000CN | Paper exit sensor arm - Spring NOT included |

### Bushing

| | | |
|---|---|---|
| 129 | RB1-7184-000CN | Pickup roller bushing |
| 130 | RB1-7246-000CN | Pressure roller bushing |
| 131 | RB1-7288-020CN | Exit roller bushing |
| 132 | RB1-7289-000CN | Fuser exit roller bushing |

### Clip

| | | |
|---|---|---|
| 133 | RB1-7223-000CN | Pickup roller shaft grounding clip |

### Clutch

| | | |
|---|---|---|
| 134 | RB1-7197-000CN | Clutch |

### Connector

| | | |
|---|---|---|
| 135 | VS1-5057-002CN | SL2/Tray 2 solenoid electrical connector |

### Delivery

| | | |
|---|---|---|
| 136 | RG5-2012-070CN | Delivery assembly - Includes 4 white 'multi-ridged' & 2 other delivery rollers and their associated springs |

### Door

| | | |
|---|---|---|
| 137 | RF5-1501-030CN | Main front door that is attached to the multipurpose input tray |

### Feed Assembly

| | | |
|---|---|---|
| 138 | RG5-1942-000CN | Feed assembly - Has idler roller, sensor flag and paper input sensors - PS 202/203 |

© 2004 Hewlett-Packard Development Company, L.P. 

## Paper Path Parts

### Frame

| | | |
|---|---|---|
| 139 | RB1-7177-000CN | Paper feed frame - Main frame that parts such as pickup roller assembly and separation pad are installed on |

### Fusing Assembly

| | | |
|---|---|---|
| 140 | 5182-2809 | Heating element assembly (For 220V to 240V operation) - Bonds toner to paper by heat - In quantity price break packaging (Contains 5 New assemblies)<br>NO LONGER SUPPLIED |
| 141 | 5182-2810 | Heating element assembly (For 220V to 240V operation) - Bonds toner to paper by heat - In quantity price break packaging (Contains 10 New assemblies) |

### Gear

| | | |
|---|---|---|
| 142 | RS5-0796-000CN | Pressure roller shaft gear |
| 143 | RY7-5005-000CN | Gear kit - Includes first five gears on front left side area of the internal chassis - Gear kit #1 |
| 144 | RY7-5006-000CN | Gear kit - Includes first four gears driven by main motor |

### Guide

| | | |
|---|---|---|
| 145 | RB1-7176-000CN | Sheet guide - Mylar strip paper guide |
| 146 | RB1-7247-000CN | Fuser paper guide |
| 147 | RB1-7341-000CN | Right side toner cartridge guide |
| 148 | RF5-1514-000CN | Left side toner cartridge guide - Back half of guide |
| 149 | RF5-1515-000CN | Right side toner cartridge guide - Back half of guide |
| 150 | RF5-1530-000CN | Transfer roller guide - Fits over top of transfer roller |
| 151 | RF5-1533-000CN | Pressure roller ground guide - Protects pressure roller ground cable |
| 152 | RG5-1961-000CN | Transfer guide assembly |
| 153 | RG5-2013-000CN | Separation guide assembly - Includes the face-up/face-down paper selection lever/deflector and fuser exit roller assembly<br>NO LONGER SUPPLIED |
| 154 | RG5-2014-000CN | Paper guide - Inside spur assembly<br>NO LONGER SUPPLIED |
| 155 | RG5-2015-000CN | Paper guide - Outside spur assembly<br>NO LONGER SUPPLIED |

### Heating Roller

| | | |
|---|---|---|
| 156 | RG5-1964-020CN | Heating element assembly (For 100VAC to 120VAC operation) - Hollow shaft with heating element inside - Yellow 'Warning hot' label on top - Plastic sleeve not available separately<br>NO LONGER SUPPLIED |
| 157 | RG5-1965-020CN | Heating element assembly (For 220V to 240V operation) - Hollow shaft with heating element inside - Plastic sleeve not available separately<br>NO LONGER SUPPLIED |

### Laser/Scanner

| | | |
|---|---|---|
| 158 | C3941-69003 | Laser/scanner assembly - Mounts on top of the internal main chassis |

### Leg

| | | |
|---|---|---|
| 159 | RB1-7185-000CN | Left leg - Small leg on left side of paper kick plate |
| 160 | RB1-7186-000CN | Right leg - Small leg on right side of paper kick plate |

### Lever

| | | |
|---|---|---|
| 161 | RB1-7276-000CN | Deflects paper from fuser exit roller to face-up or face-down output bin |

### Motor

| | | |
|---|---|---|
| 162 | RH7-1282-000CN | Main motor<br>NO LONGER SUPPLIED |

### Pad

| | | |
|---|---|---|
| 163 | RY7-5077-000CN | Printer separation pad kit - Includes main pad, spring, and two smaller subpads - Also order pickup roller assembly |

© 2004 Hewlett-Packard Development Company, L.P. 

## Paper Path Parts

### Plate

| | | |
|---|---|---|
| 164 | RF5-1517-000CN | Fuser pressure plate - Guides paper over fuser roller |
| 165 | RF5-2372-000CN | Paper kick plate (Middle) |

### Protector

| | | |
|---|---|---|
| | RB1-7334-000CN | Jam prevention protector - Installs in the delivery assembly allows paper jams to be cleared without damaging printer |

### Roller

| | | |
|---|---|---|
| 167 | RB1-7226-000CN | Idler roller - Shaft with roller on both ends - Part of feed assembly |
| 168 | RB1-7284-000CN | Delivery roller #1 - White 'Multi-ridged' roller - Four are used in delivery assembly |
| 169 | RB1-7285-000CN | Delivery roller #2 - 2 are used in delivery assembly |
| 170 | RF5-1516-000CN | Pressure roller - Shaft/roller with gear on left side of roller located underneath the heating element<br>NO LONGER SUPPLIED |
| 171 | RF5-1521-000CN | Exit roller assy - Shaft with 4 black rollers - Rollers are aligned with & work in conjunction with the white 'Multi-ridged' rollers of the delivery assembly |
| 172 | RF5-1522-000CN | Fuser exit roller assembly - Shaft with two rollers - Attaches to separation guide assembly |
| 173 | RF5-1534-000CN | Transfer roller - Located underneath toner (EP) cartridge |
| 174 | RG5-3486-040CN | Pickup roller assembly - Shaft/roller assy that feeds paper from paper input assemblies - Also order separation pad kit |

### Sensor

| | | |
|---|---|---|
| 175 | RY7-5009-000CN | Paper sensor flag/arm - Detects leading and trailing edges of paper |

### Shaft

| | | |
|---|---|---|
| 176 | RG5-1947-000CN | Idler roller shaft assembly - Includes spring and gears on left end of shaft |

### Solenoid

| | | |
|---|---|---|
| 177 | RH7-5139-000CN | Paper pickup solenoid |

### Spring

| | | |
|---|---|---|
| 178 | RB1-7286-000CN | Spring for #1 delivery rollers |
| 179 | RB1-7287-000CN | Spring for the delivery rollers |
| 180 | RB1-7294-000CN | Spring - For paper exit sensor arm |
| 181 | RS5-2501-000CN | Paper kick plate spring |

### Strap

| | | |
|---|---|---|
| 182 | RB1-7129-000CN | Case grounding strap (metal) |

### Support

| | | |
|---|---|---|
| 183 | RB1-7255-000CN | Left side pressure roller support |
| 184 | RB1-7256-000CN | Right side pressure roller support |

### Tray Fin

| | | |
|---|---|---|
| | RB1-7332-000CN | Output tray fin - Added to output tray to reduce possibility of accordion paper jams at fuser roller - Replaced by EP (Toner) door assembly<br>NO LONGER SUPPLIED |
| | *RF5-1501-030CN* | *New Part for RB1-7332-000CN* |

## Power Supplies and Parts

### Power Cord

| | | |
|---|---|---|
| | 8120-1351 | Power cord (Mint Gray) - 17 AWG, 2.3m (7.5ft) long - Has straight (F) receptacle (For 240V in the UK, Hong Kong, Singapore, Malaysia, and Brunei) |
| | 8120-1369 | Power cord (Mint Gray) - 17 AWG, 2.0m (6.6ft) long - Has straight (F) receptacle (For 240V in Australia, New Zealand, and China) |
| | 8120-1378 | Power cord (Jade Gray) - 18 AWG, 2.3m (7.5ft) long - Has straight (F) receptacle (For 120V in USA, Canada, Latin America, Korea, Taiwan, Thailand, Spain, Brazil, and Vietnam) |
| | 8120-1689 | Power cord (Mint Gray) - 17 AWG, 2.0m (6.6ft) long - Has straight (F) receptacle (For 220V in Europe, Bangladesh, Indonesia, Pakistan, Burma, Sri Lanka, and Vietnam) |

© 2004 Hewlett-Packard Development Company, L.P. 

## Power Supplies and Parts

### Power Cord

| | | |
|---|---|---|
| | 8120-2104 | Power cord (Mint Gray) - 2.0m (6.6ft) long - Has straight (F) receptacle (For 220V in Switzerland) |
| | 8120-2956 | Power cord (Mint Gray) - 2.0m (6.6ft) long - Has straight (F) receptacle (For 220V in Denmark) |
| | 8120-4211 | Power cord (Mint Gray) - 17 AWG, 2.0m (6.6ft) long - Has straight (F) receptacle (For 240V in South Africa and India) |
| | 8120-4753 | Power cord (Flint Gray) - 18 AWG, 2.3m (7.5ft) long - Has straight (F) receptacle (For 100V in Japan) |

### Power Supply

| | | |
|---|---|---|
| 194 | C3941-69001 | DC controller/power supply board - 120VAC input<br>NO LONGER SUPPLIED |
| 195 | C3941-69002 | DC controller/power supply board - 240VAC input |

© 2004 Hewlett-Packard Development Company, L.P. 

## Major Assembly Locations

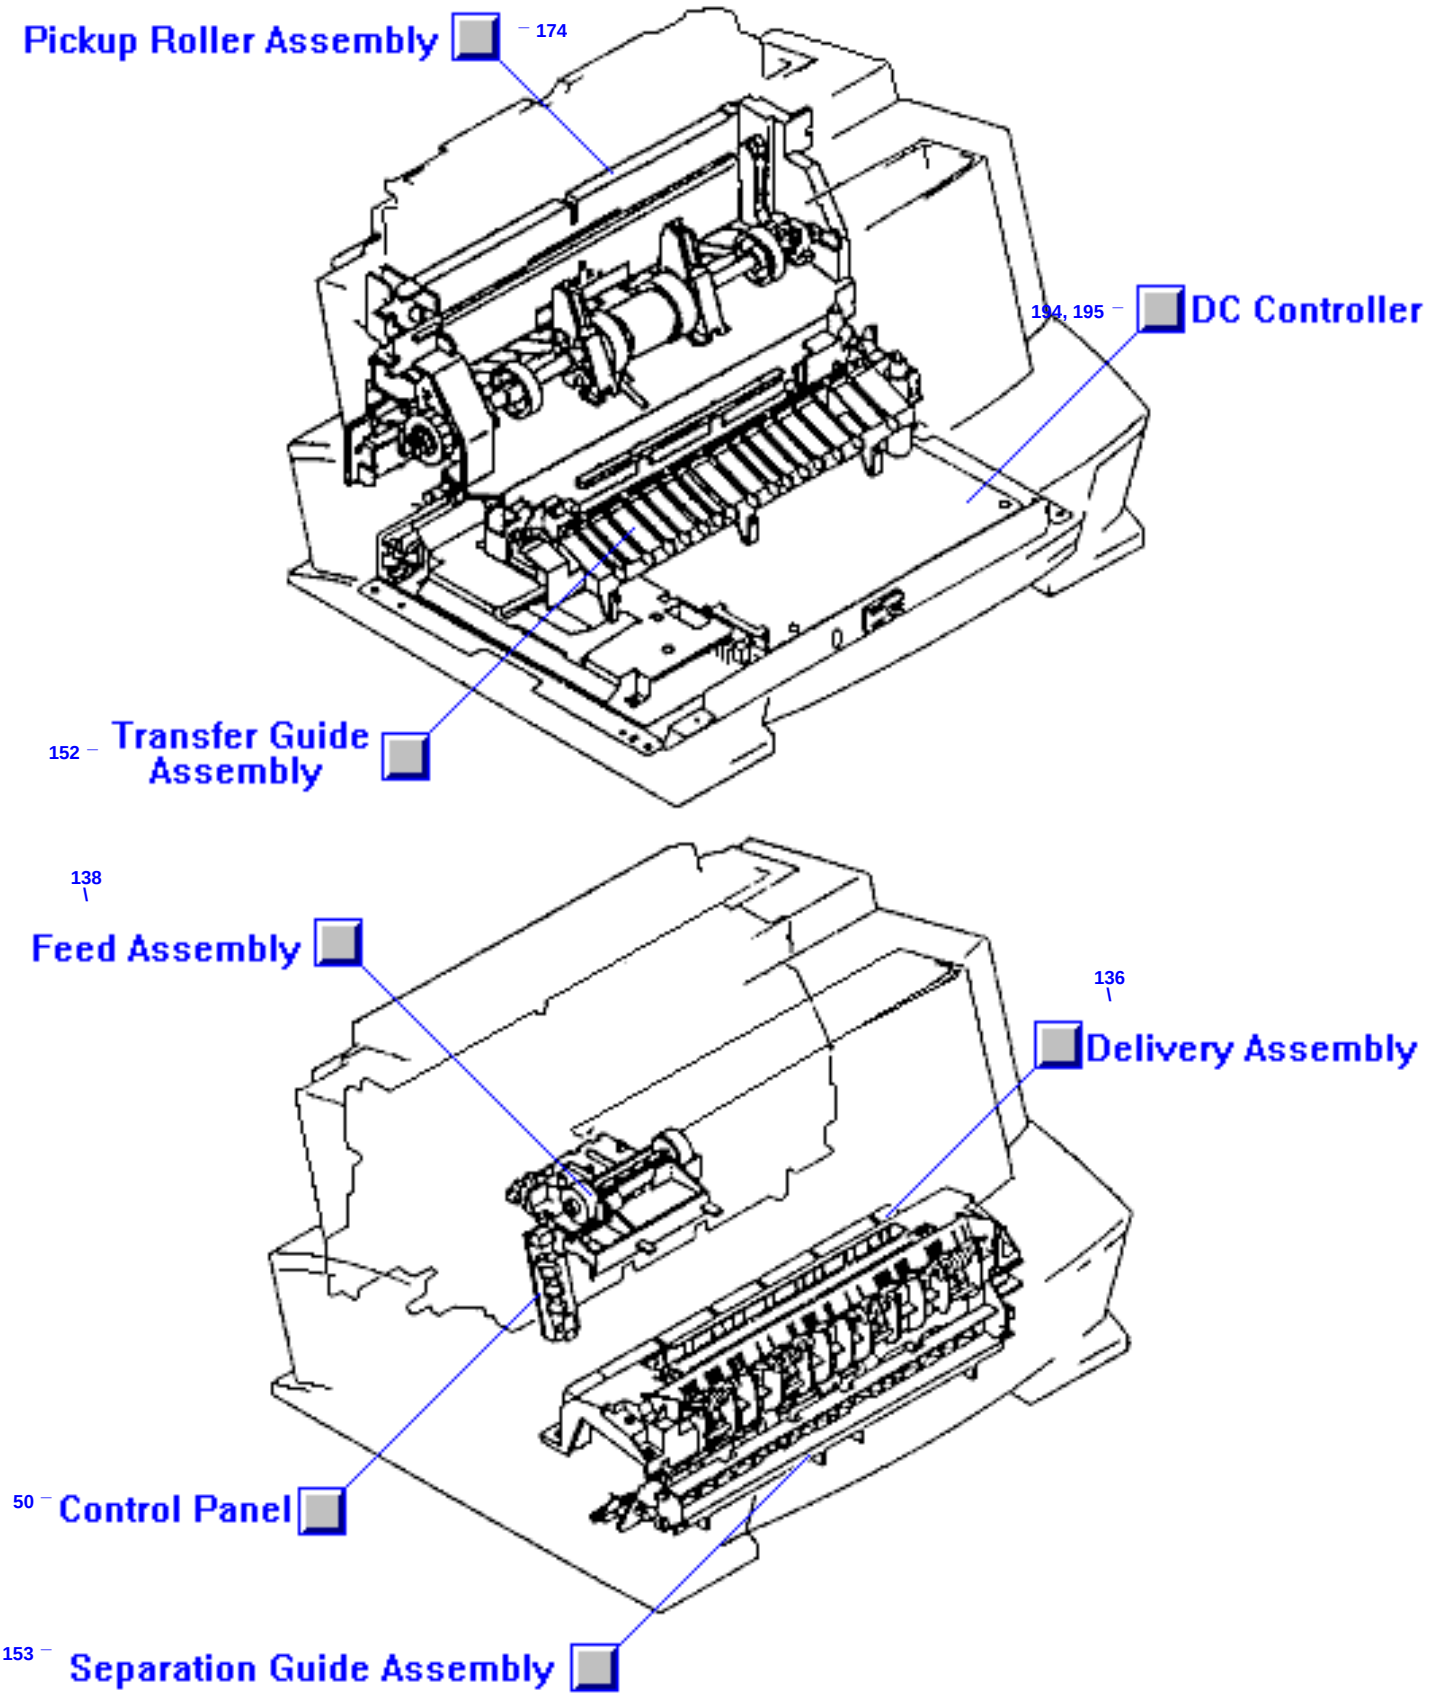

## Covers and Doors

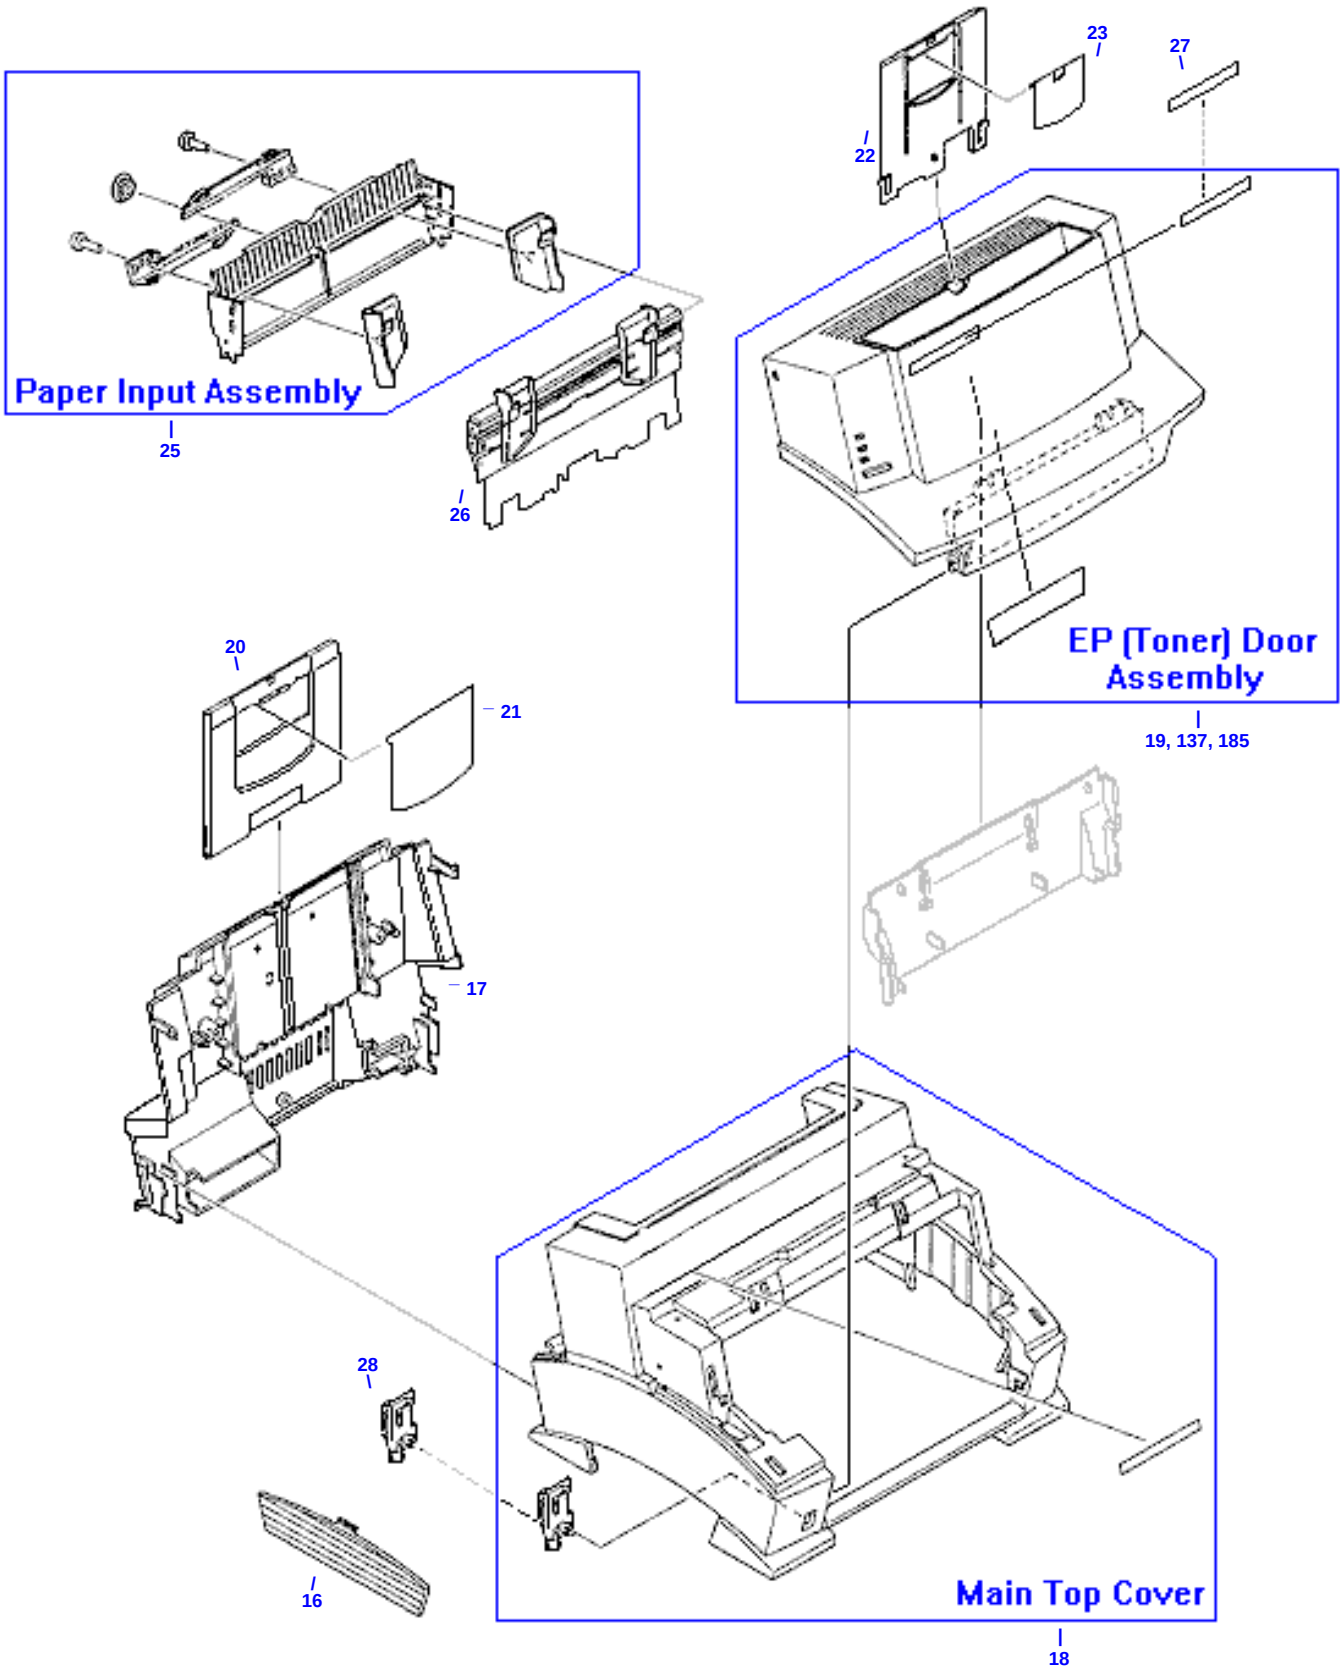

## DC Controller/Formatter and Cables

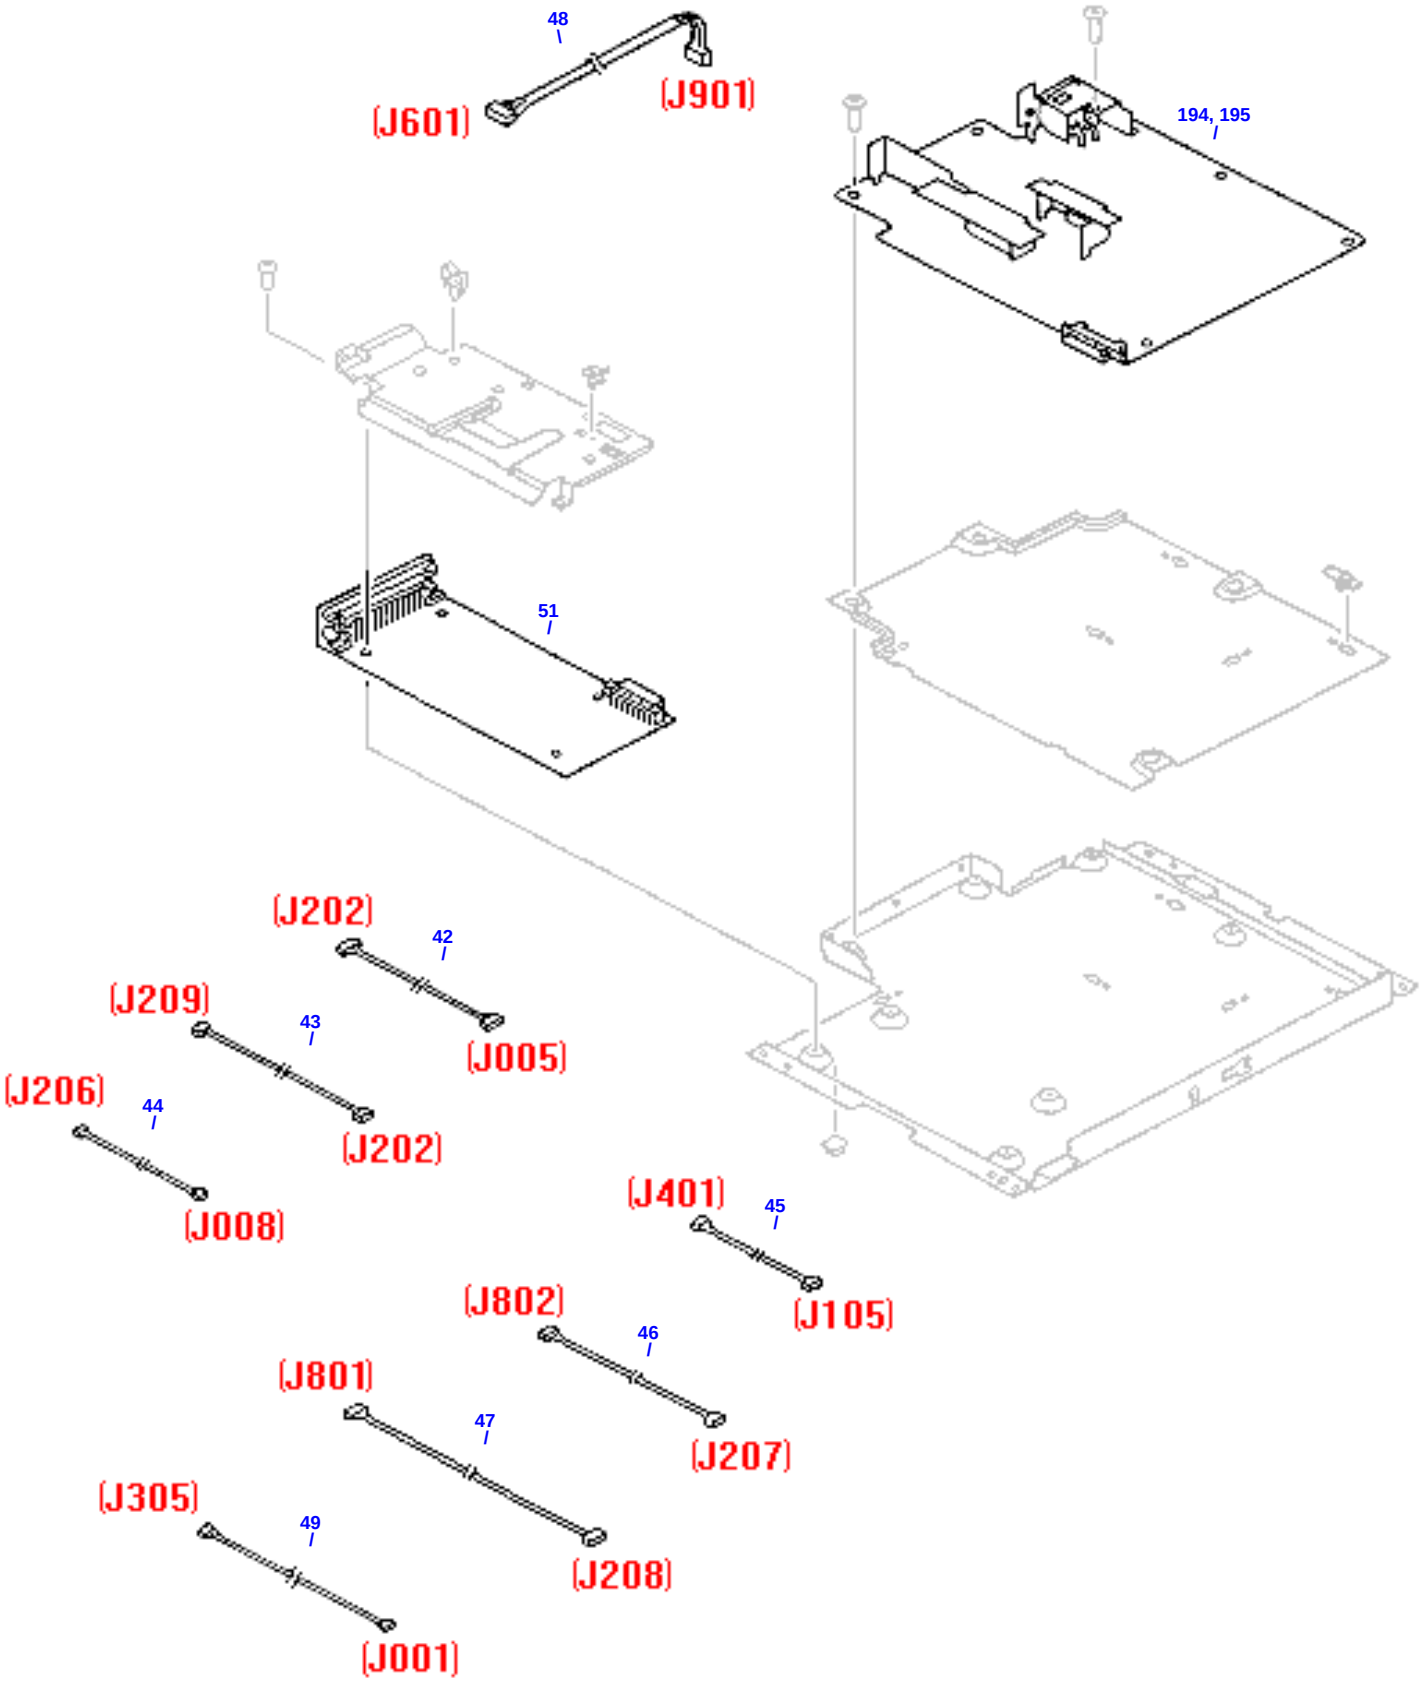

## Delivery Assembly

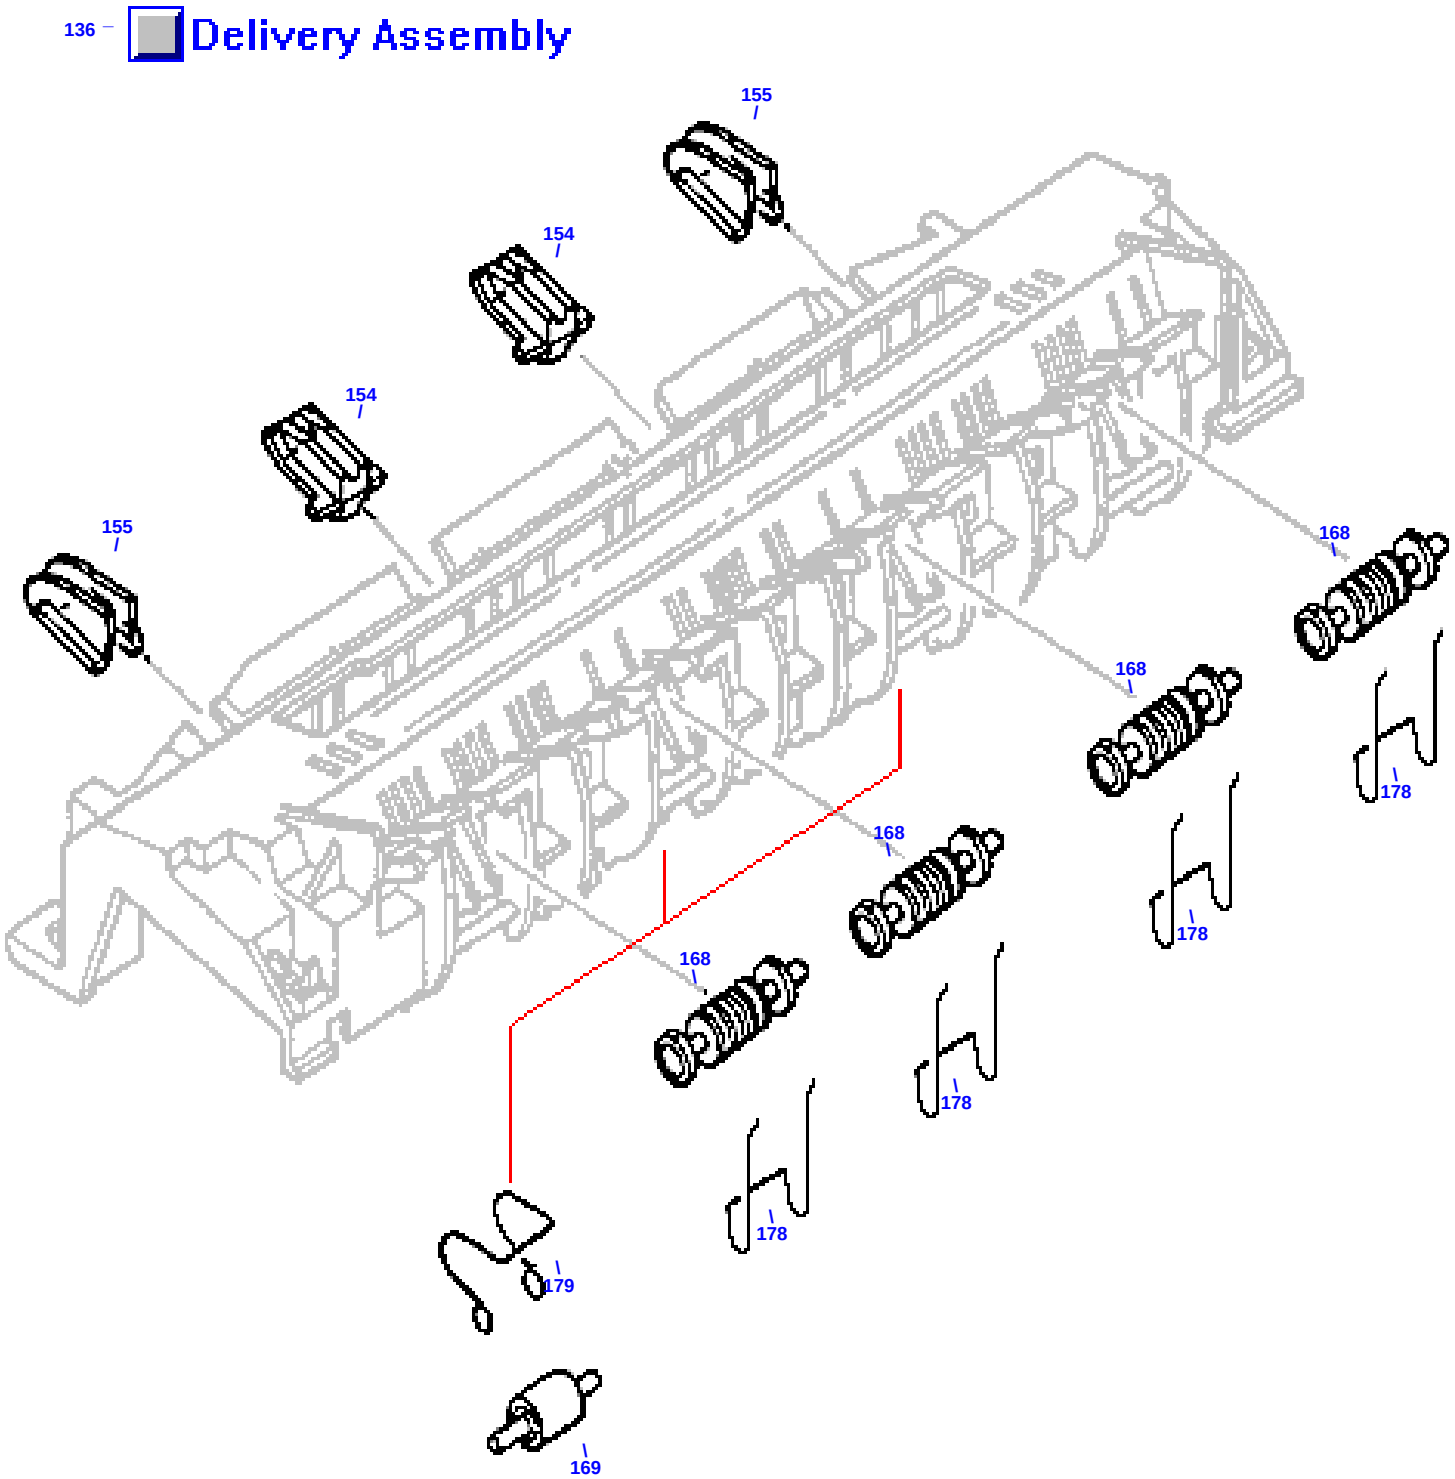

## Feed Assembly

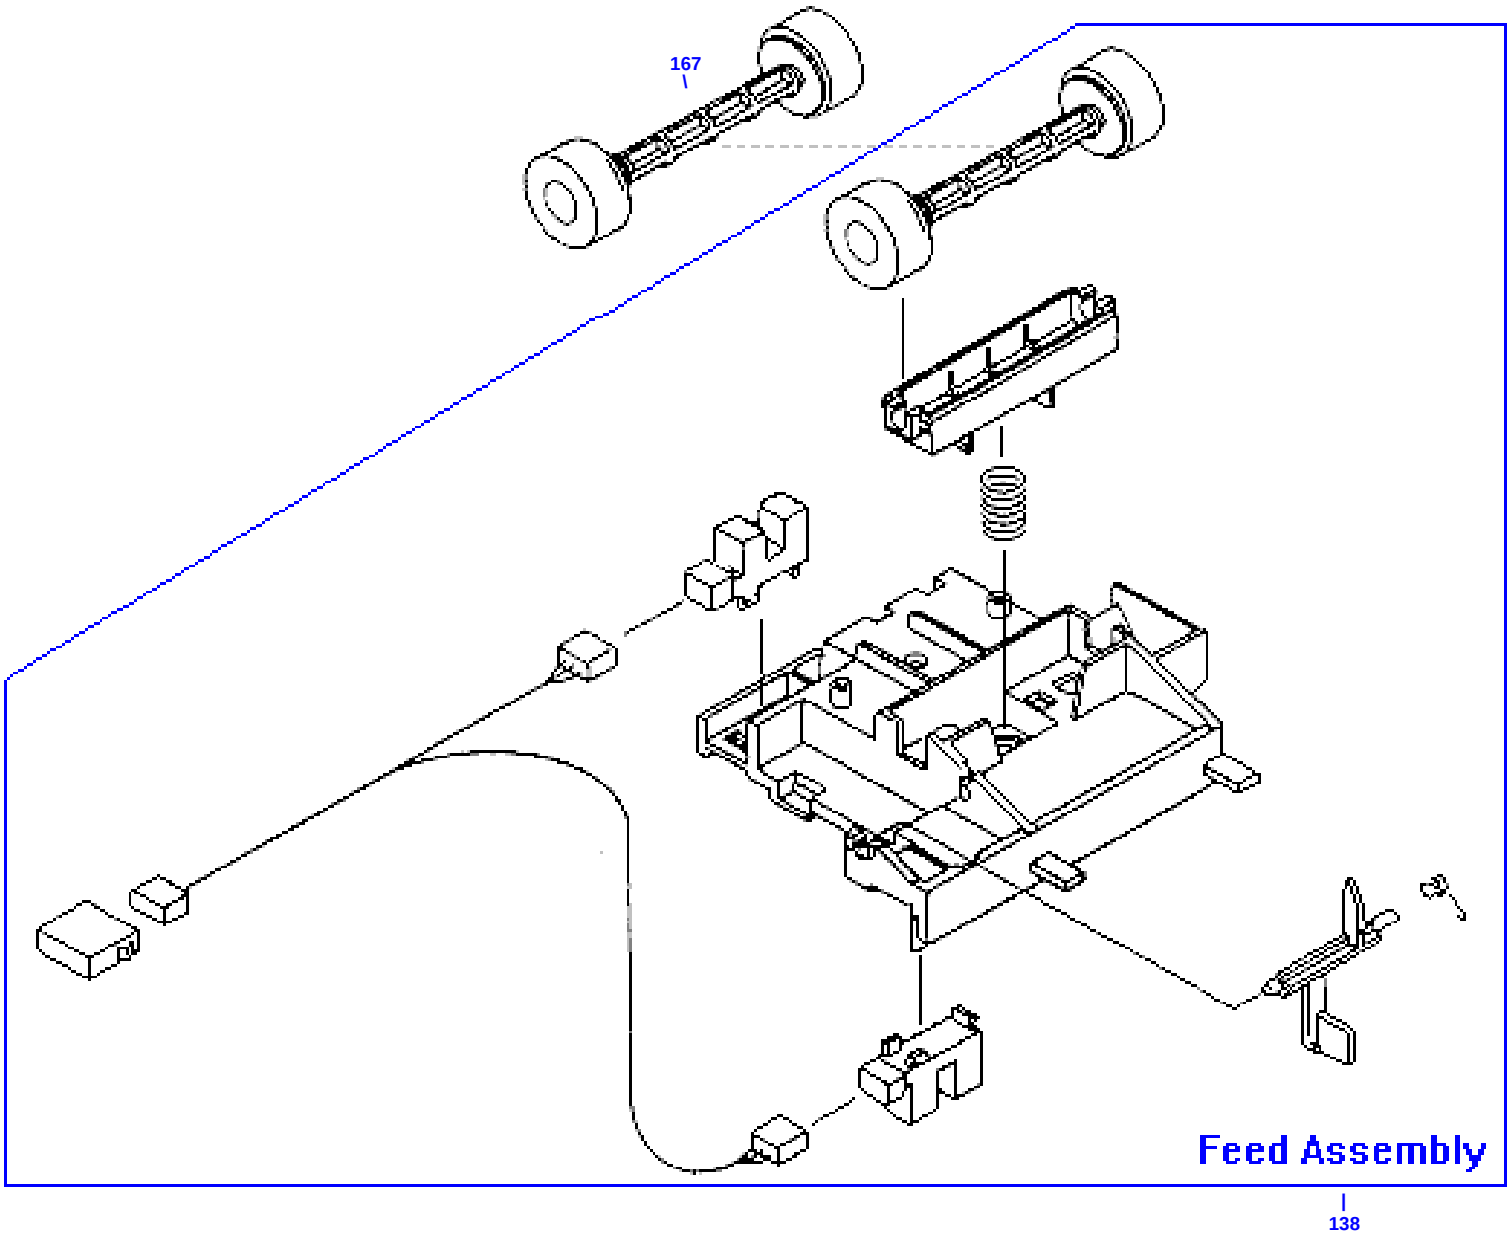


© 2004 Hewlett-Packard Development Company, L.P. 

## Internal Components (1 of 3)

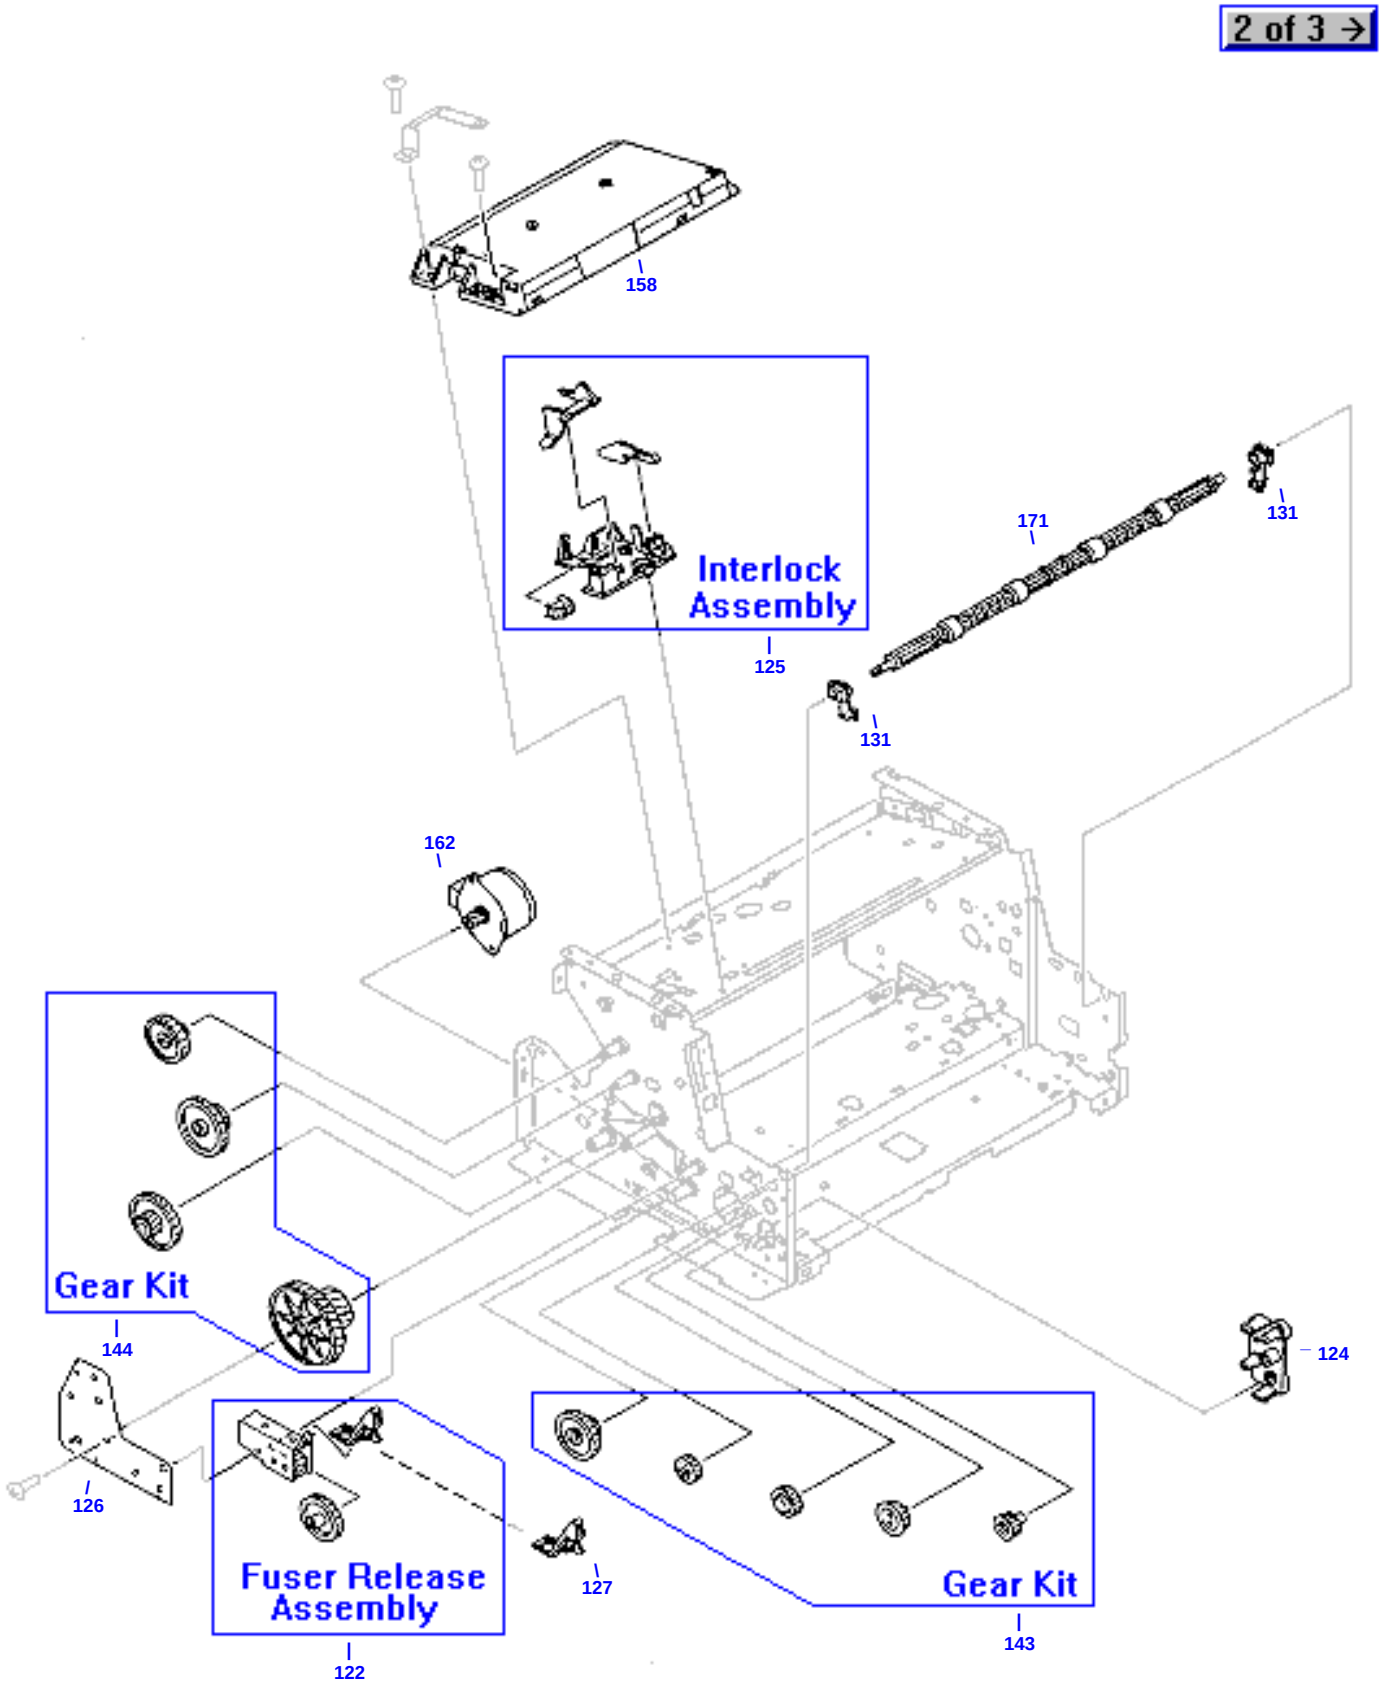

## Internal Components (2 of 3)

← 1 of 3
3 of 3 →

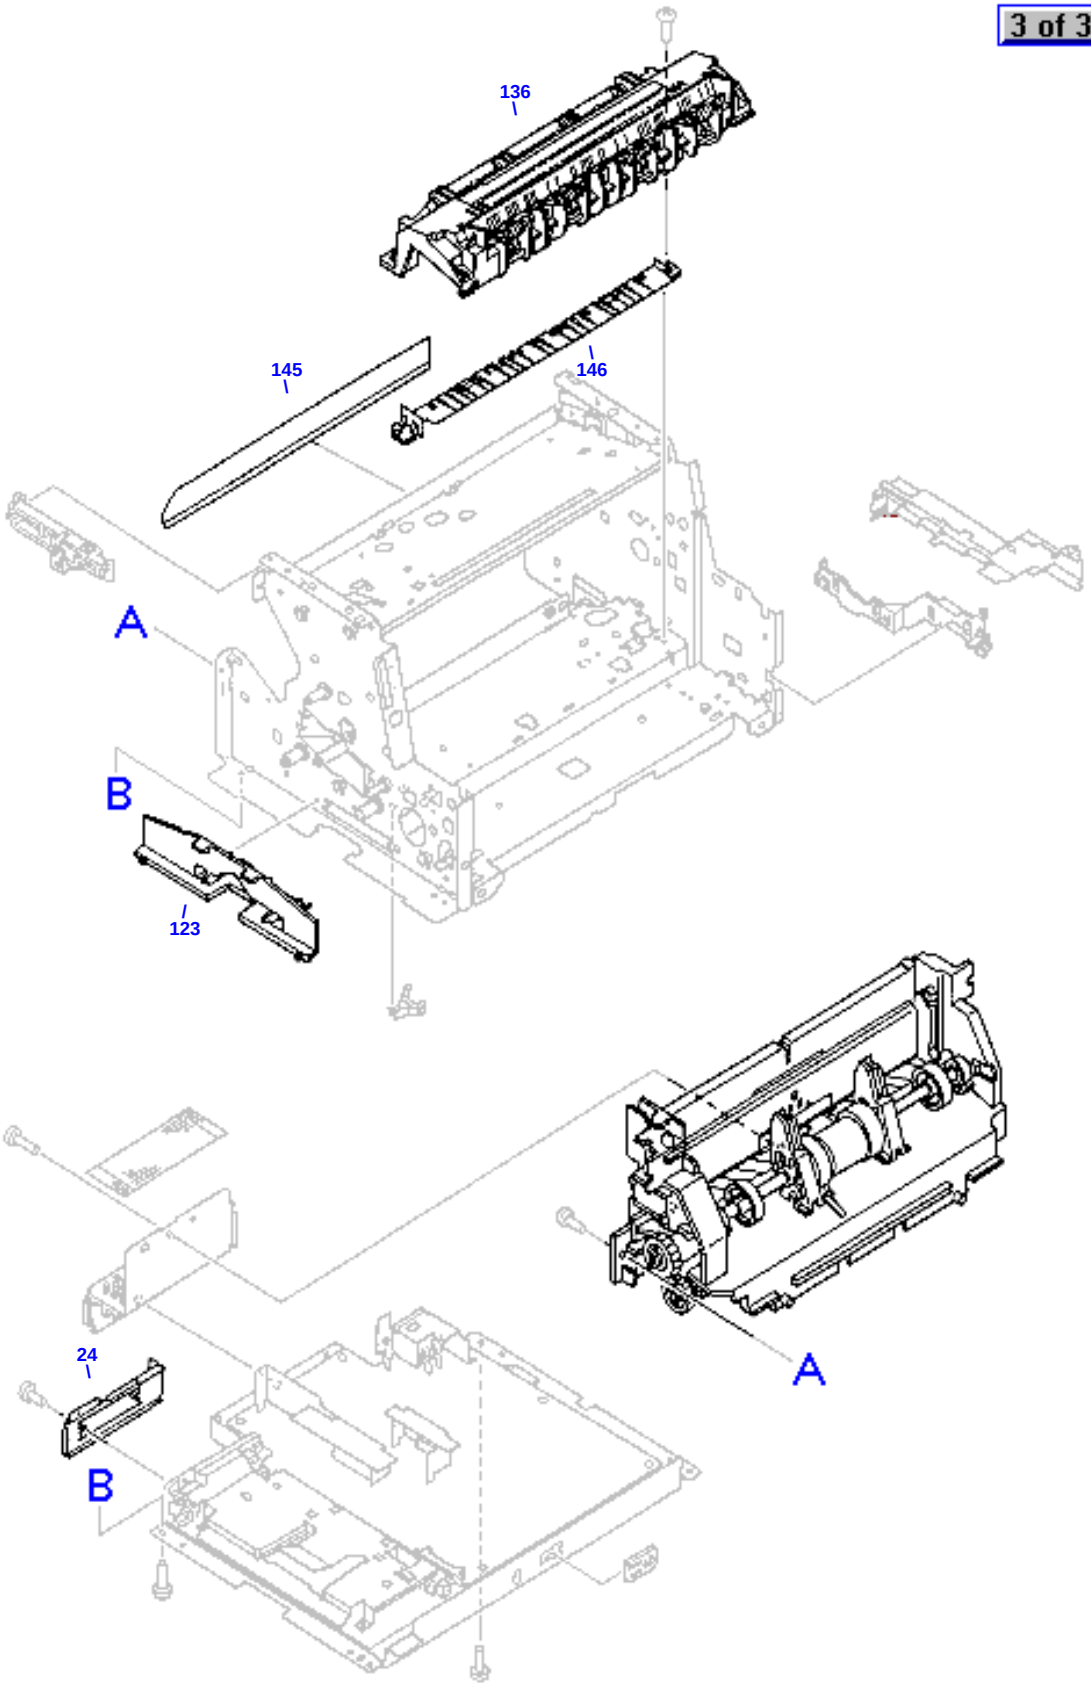

## Internal Components (3 of 3)

← 2 of 3

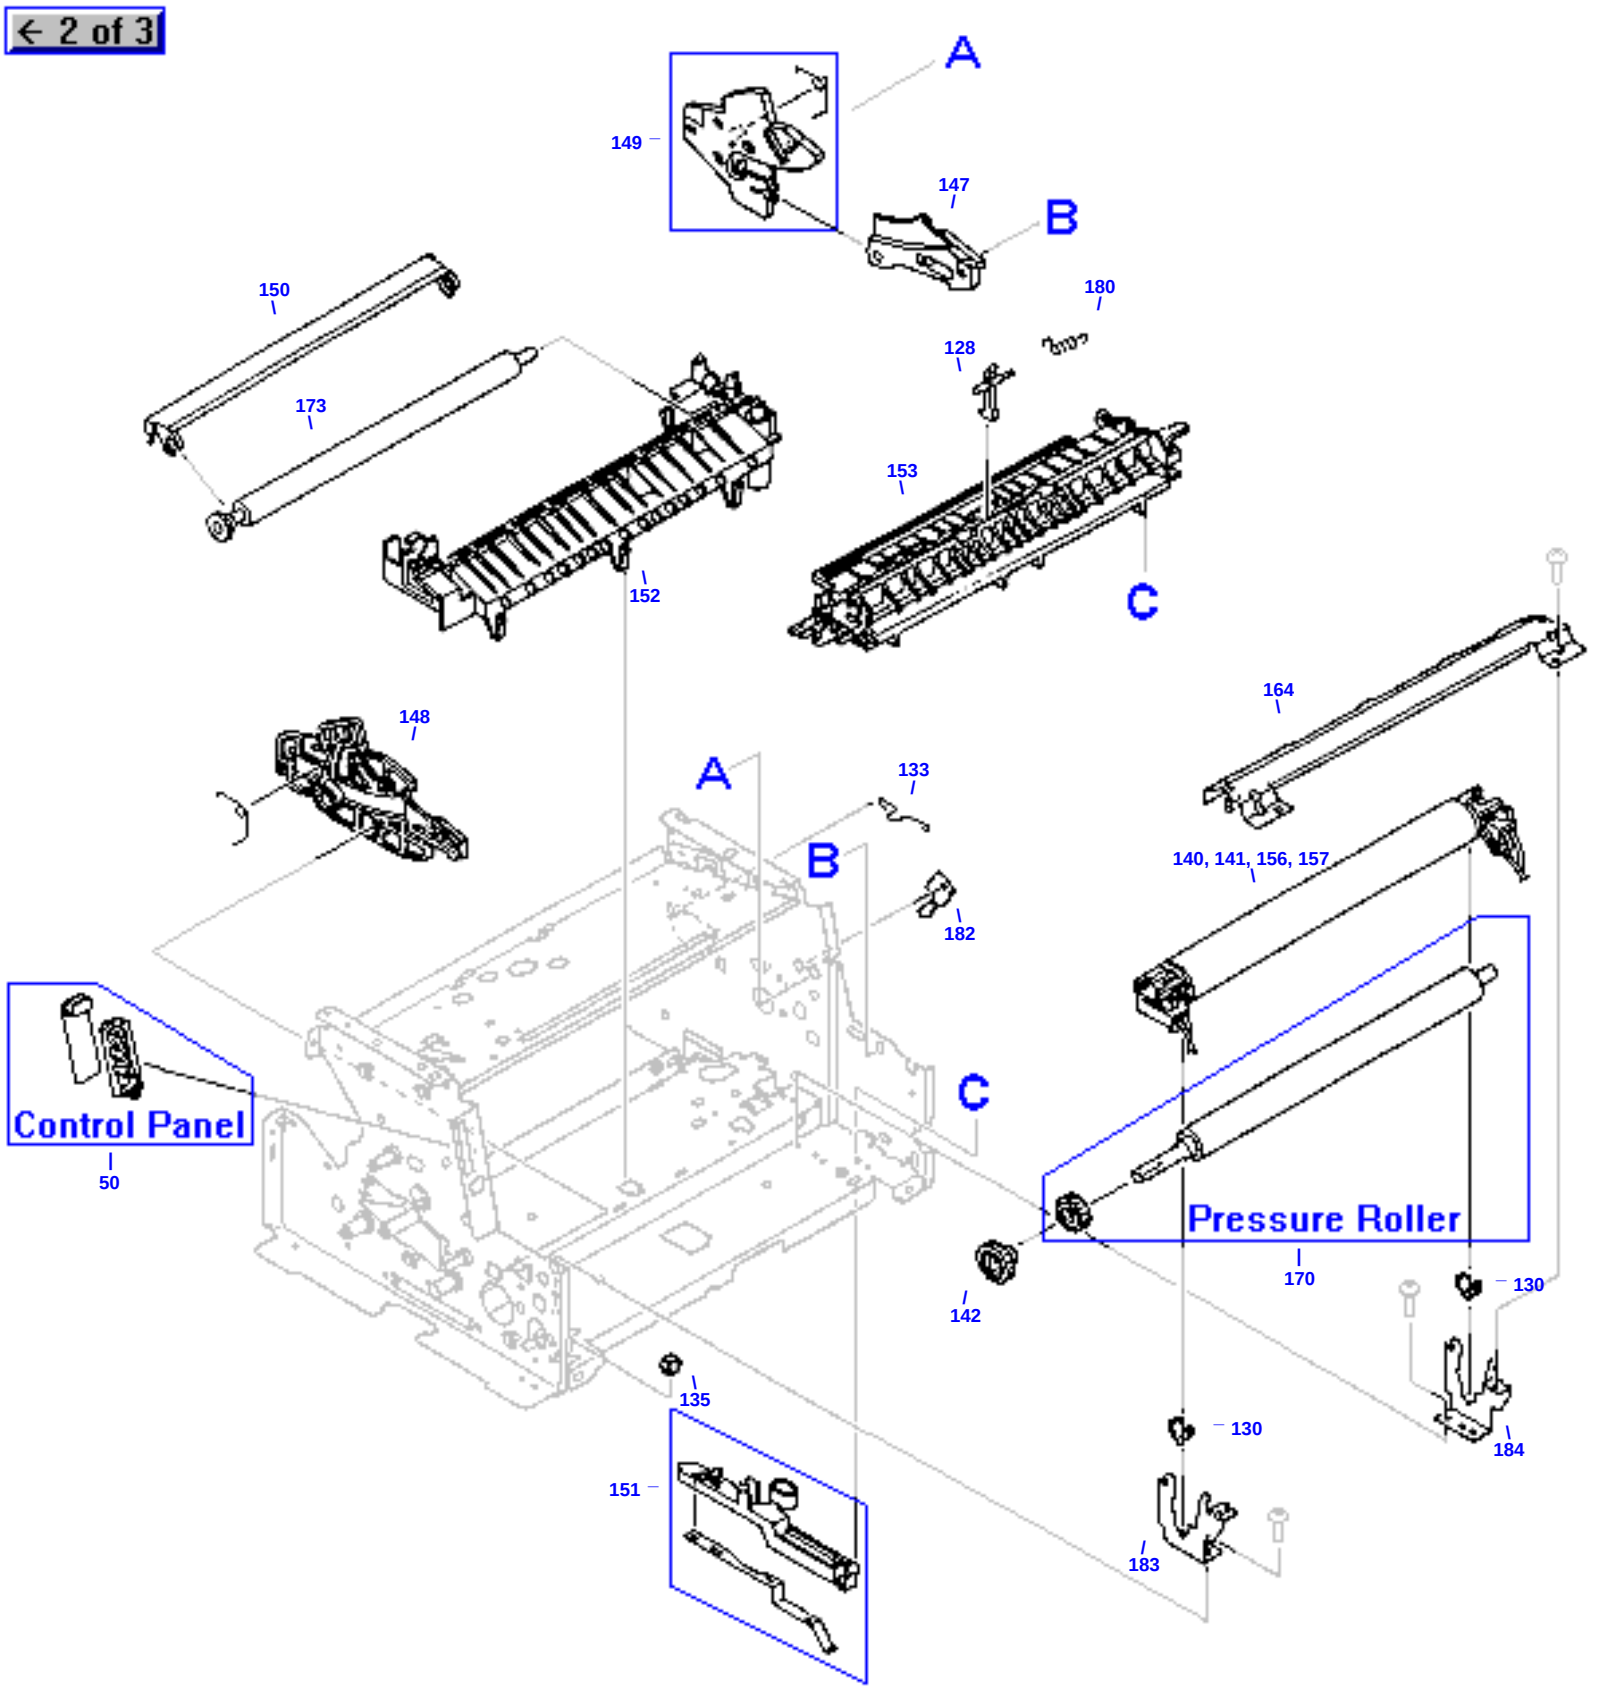

## Pickup Assembly

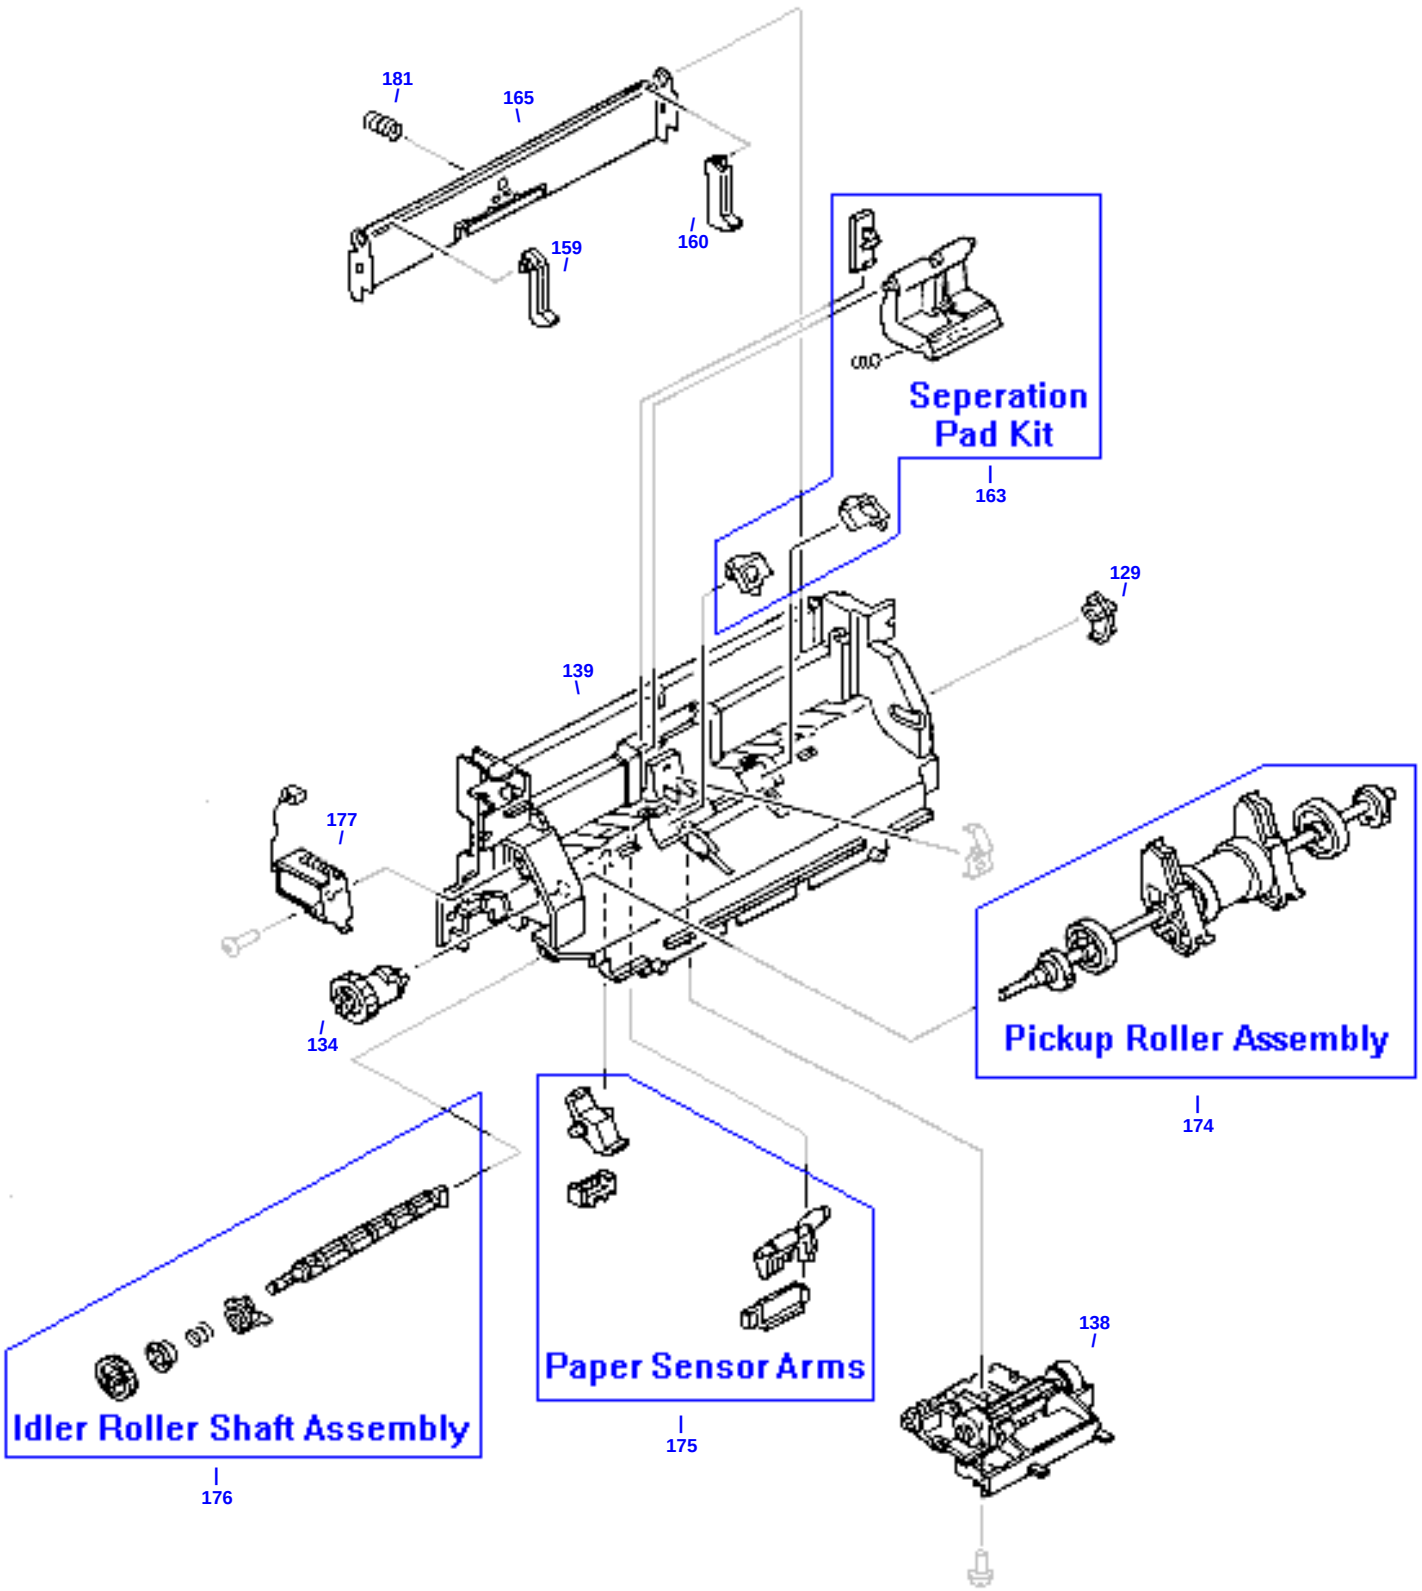

## Seperation Guide Assembly

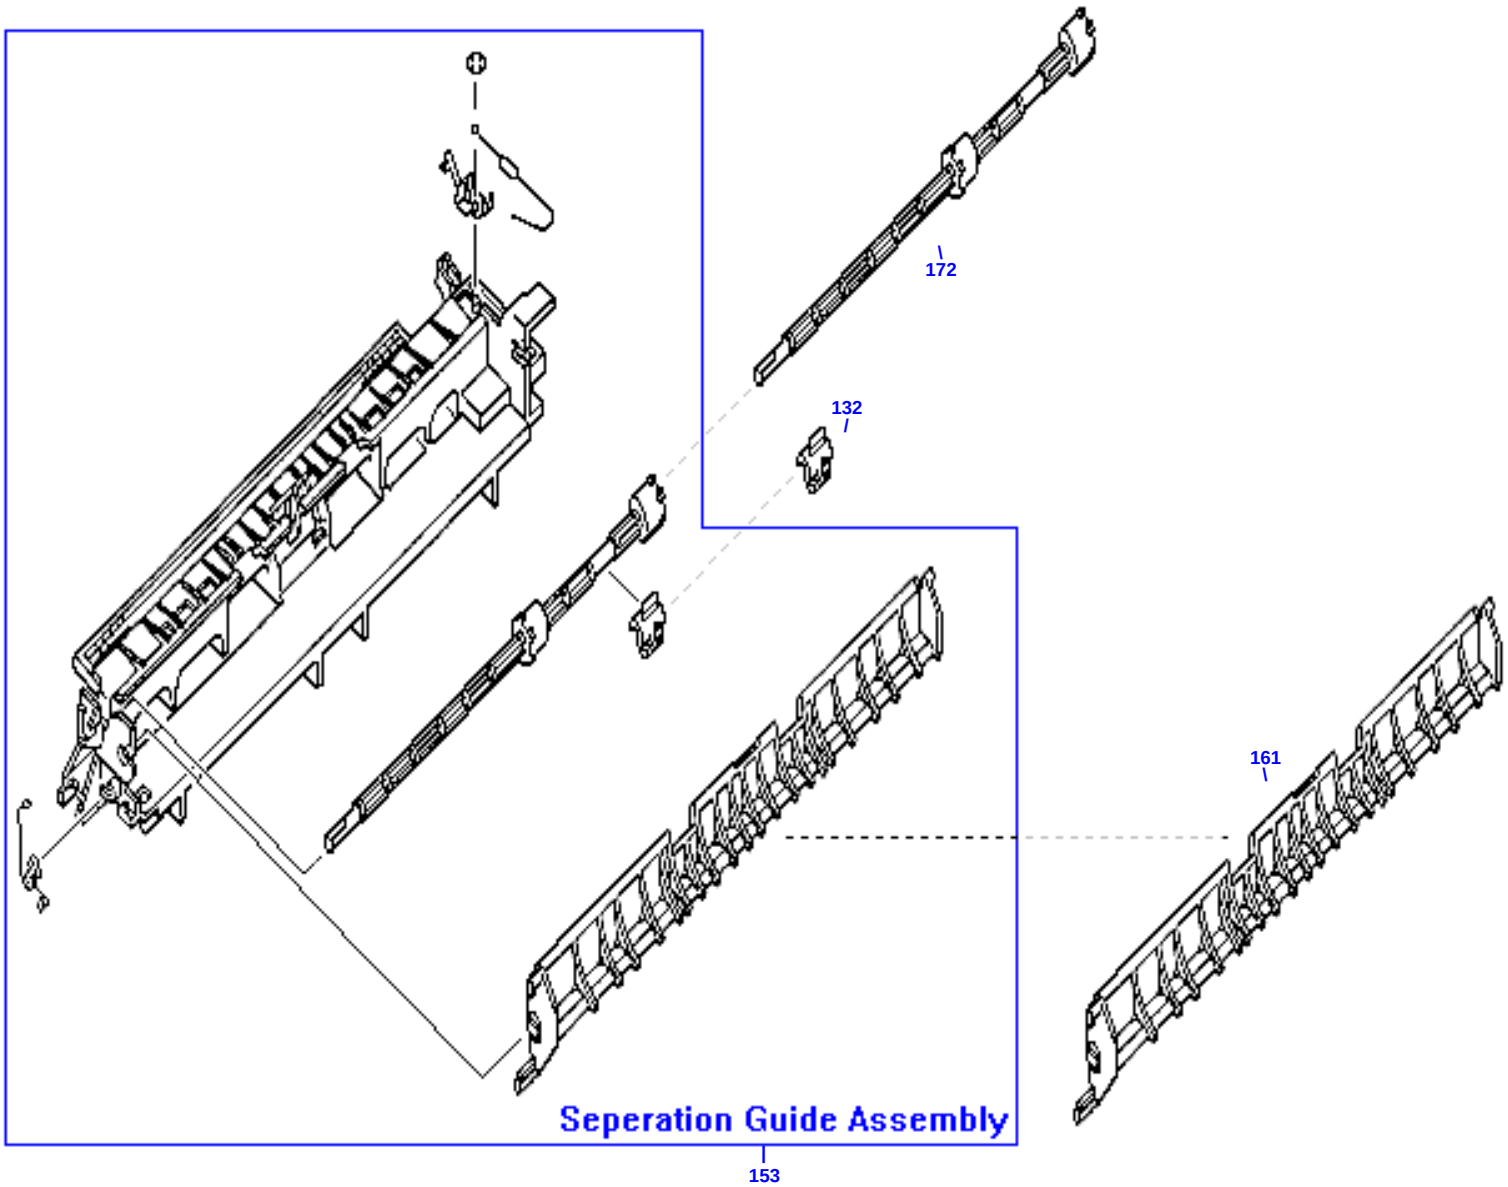

## HP Parts Reference Guide
http://www.hp.com/go/parts

## HP PartSurfer
http://partsurfer.hp.com

## HP Parts Ordering Information
http://www.hp.com/go/hpparts

## HP Parts Questions/Comments
http://partsurfer.hp.com/contactus.htm

© 2004 Hewlett-Packard Development Company, L.P. 